



INSTRUCTIONS CM337

© Panduit Corp. 2007

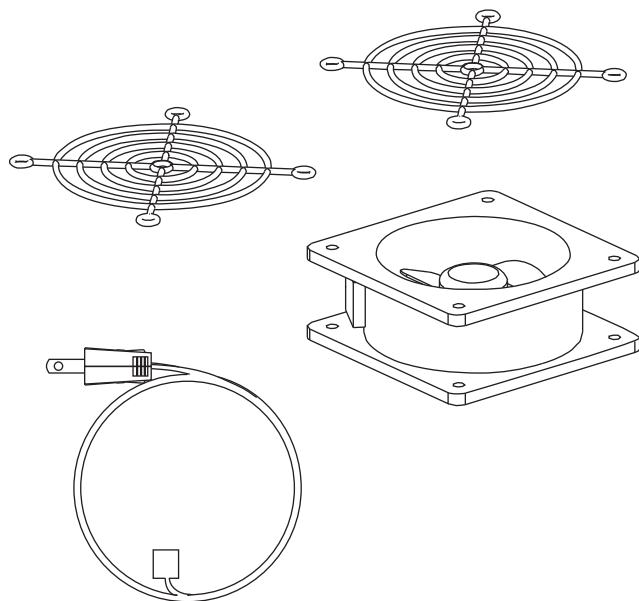


PZAEFAN

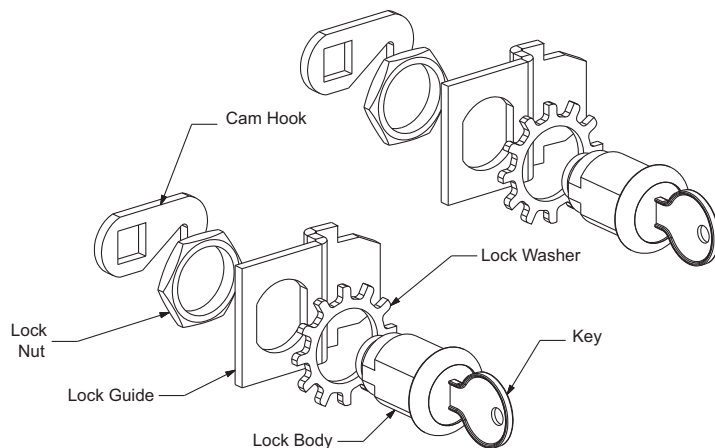

PZBASELK


PZBASELK Installation:

Knockout the two large holes directly opposite from the hinges on the cover. Slide in lock body through hole from outside of door. Then slide lock washer, lock guide, and locknut onto lock body from inside the door. Attach lock hook with supplied screw. (See figure below). Make sure hook on lock is facing down as shown above.

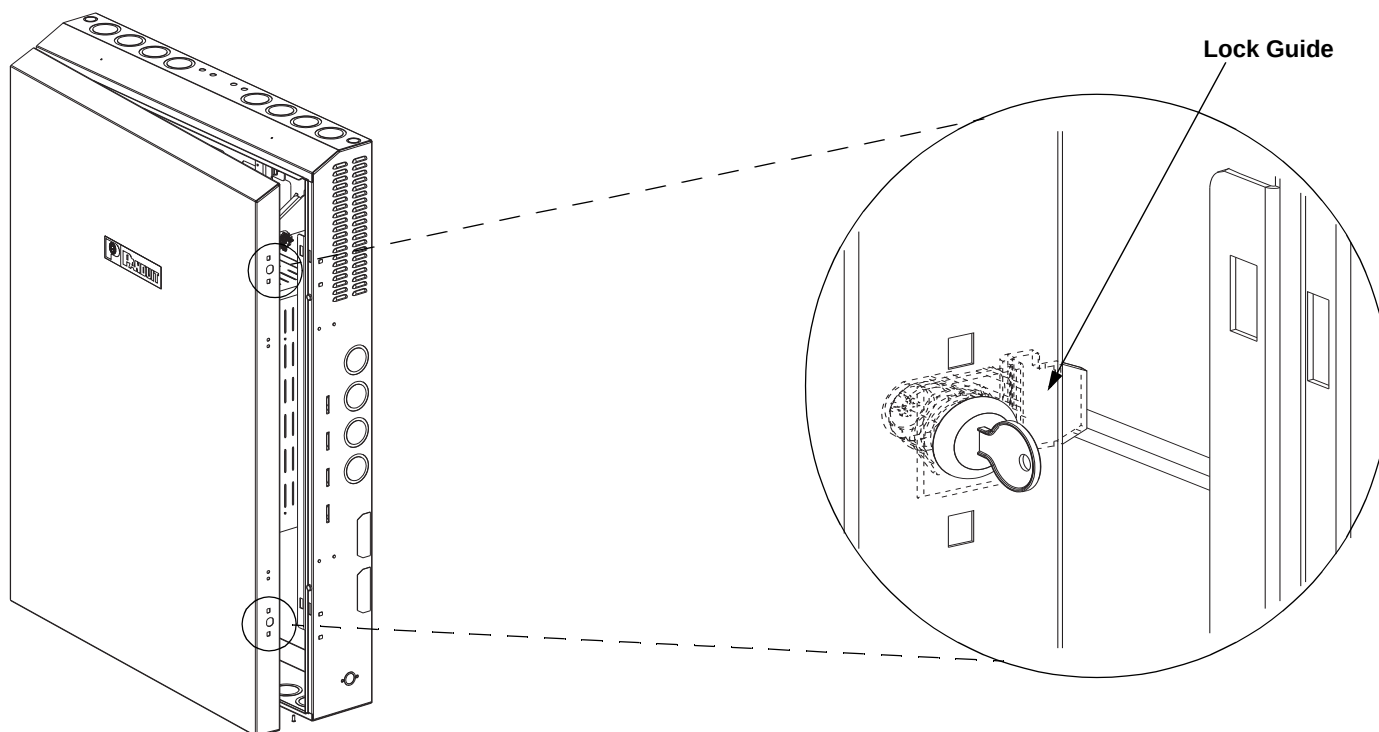


1. Plug Termination

- 1.1 Determine length of power cord needed. Strip off the insulation approximately 1".
- 1.2 Wrap the exposed wire around the terminal screw as shown and tighten to hold in place. Repeat for other terminal.
- 1.3 Align the notches of the terminals with the grooves on the inside of the plug half. Set terminals into one of the plug halves and hold in place.
- 1.4 While holding the terminals, place the remaining plug half on top. Secure with screw.

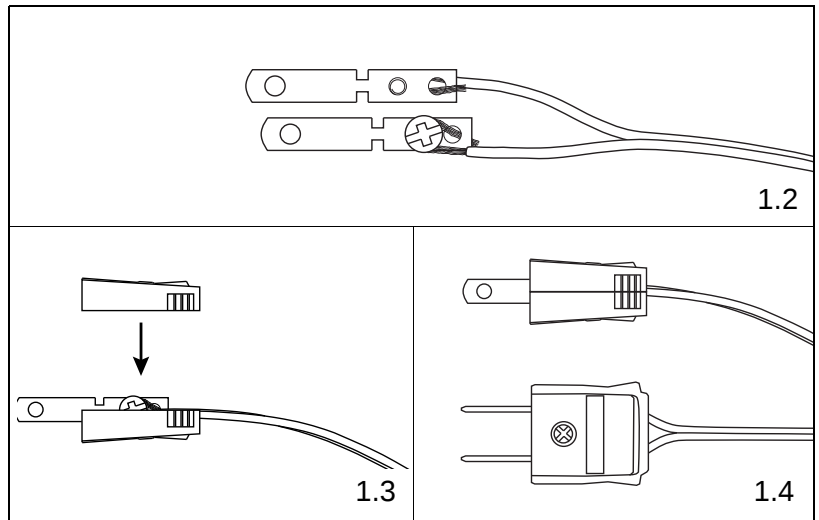

PZAEFAN Installation

Break out vent space on bottom of enclosure. Place fan over opening. Line up the bottom fan cover to the outside of enclosure and screw into place. Line up top fan cover and screw into place. Determine the length of the power cord that is desired. Strip back the insulation on the cord and terminate to the plug. Attach the power cord. The fan can be plugged into an Uninterrupted Power Supply (UPS) or the electrical box inside the enclosure.

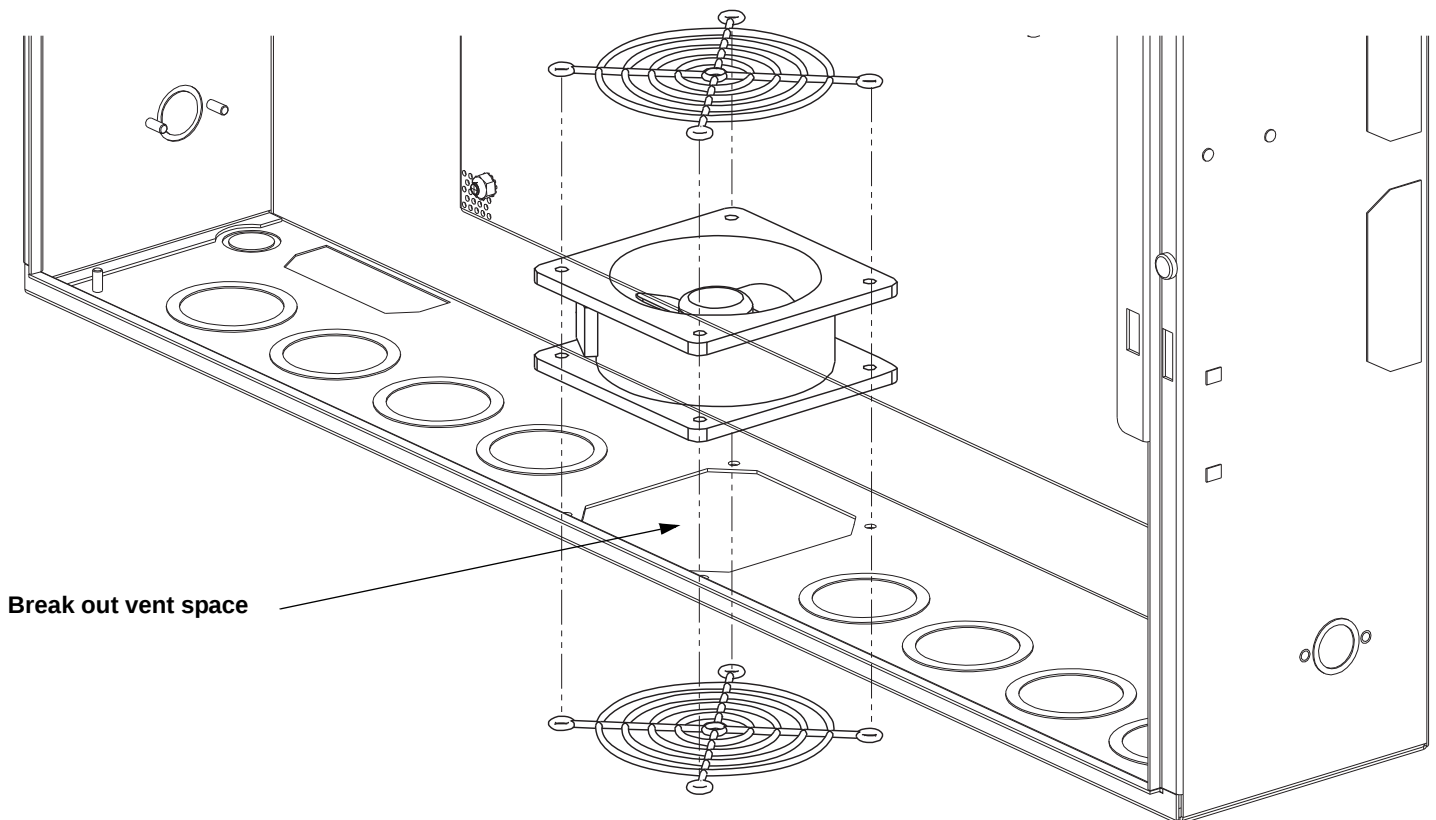

For instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp



E-mail:
cs@panduit.com
Fax:
(708)444-6448